


9002

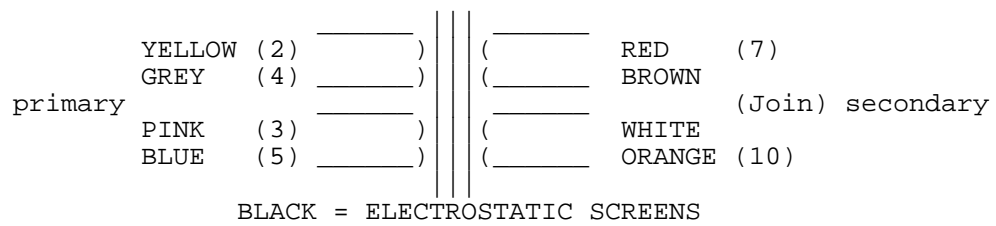

The brackets signify the numbers on the Neve circuit

For use in Neve 1272 circuit

Primaries connected in Parallel for 300ohm use.

Primaries connected in Series for 1200ohm use.