
0266

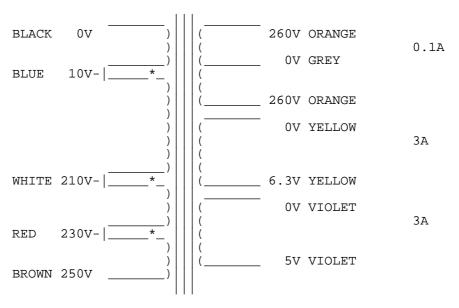

To obtain other inputs use as follows:

10V tap in place of 0V terminal thus:

BLUE/BROWN = 240V BLUE/RED = 220V BLUE/WHITE = 200V

* FOR PRIMARY WINDING WITH SOLID CORE WIRE AND SLEEVING
You will note that the Primary is built up in sections and the two
wires in the Blue, White and Red sleeves must always be individually
joined to make the primary circuit complete. Spare connections not
required can be cut short, each colour joined separately and
isolated. The solid wire inside the sleeving is coated with
polyurethane and needs to be stripped away and tinned if the leads
are shortened. For secondary windings with solid core leads please
follow the same process.

FOR FLEXIBLE LEADS PRIMARY AND SECONDARY Just cut short and isolate (INDIVIDUALLY) any spare connections

 $\underline{\text{NOTE:}}$ A certain amount of mechanical hum is prevalent in mains transformers and can be amplified when bolting to your metal work. Therefore you may find a small rubber gasket or similar material is worth fitting to quieten this hum to its' minimum, but please ensure the frame is grounded to the supply safety earth.