
0378

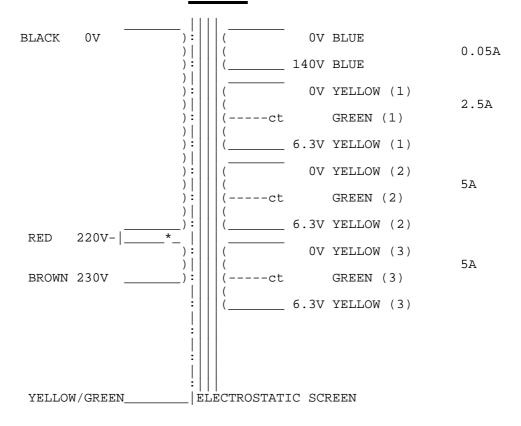

* FOR PRIMARY WINDING WITH SOLID CORE WIRE AND SLEEVING
You will note that the Primary is built up in sections and the
two wires Red sleeve must always be joined to make the primary
circuit complete. Spare connections not required can be cut
short, each colour joined separately and isolated. The solid
wire inside the sleeving is coated with polyurethane and needs
to be stripped away and tinned if the leads are shortened.

<u>FOR FLEXIBLE LEADS PRIMARY</u> - just cut short and isolate (INDIVIDUALLY) any spare connections

<u>Note:</u> A certain amount of mechanical hum is prevalent in mains transformers and can be amplified when bolting to your metal work. Therefore you may find a small rubber gasket or similar material is worth fitting to quieten this hum to its' minimum, but please ensure the frame is grounded to the supply safety earth.