
0421

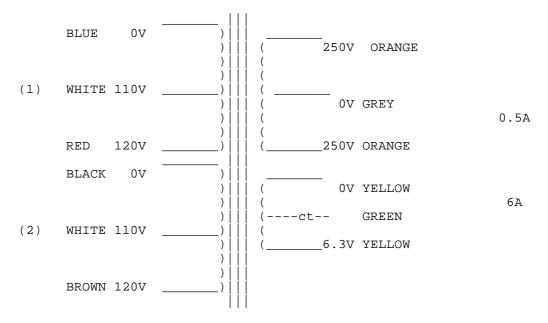

For 240V: Join RED & BLACK. Use BLUE & BROWN (Isolate both WHITES separately)

For 120V: Join BLUE & BLACK OV and join RED & BROWN 120V.

(Isolate both WHITES)

For 110V: Join BLUE & BLACK OV and join both WHITES 110V.

(Isolate RED & Isolate BROWN)

If the White leads are cut short please ensure the TWO wires inside the sleeving are joined together in BOTH cases.

 $\underline{\text{Note:}}$ A certain amount of mechanical hum is prevalent in mains transformers and can be amplified when bolting to your metal work. Therefore you may find a small rubber casket or similar material is worth fitting to quieten this hum to its' minimum, but please ensure the frame is grounded to the supply safety earth.