
0657s

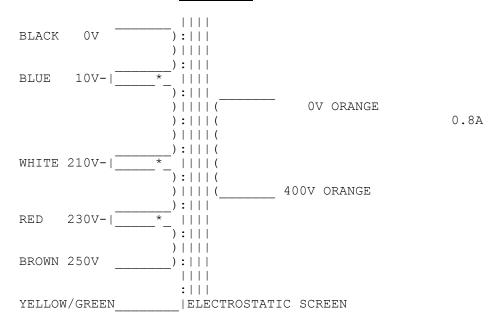

To obtain other inputs use as follows:

10V tap in place of 0V terminal thus:

BLUE/WHITE= 200V

* FOR PRIMARY WINDING WITH SOLID CORE WIRE AND SLEEVING You will note that the Primary is built up in sections a

You will note that the Primary is built up in sections and the two wires in the Blue, White and Red sleeves must always be <u>individually</u> joined to make the primary circuit complete. Spare connections not required can be cut short, each colour joined separately and isolated. The solid wire inside the sleeving is coated with polyurethane and needs to be stripped away and tinned if the leads are shortened.

FOR FLEXIBLE LEADS PRIMARY -

BLUE/BROWN = 240V

just cut short and isolate (INDIVIDUALLY) any spare connections

BLUE/RED = 220V

 $\underline{\text{Note:}}$ A certain amount of mechanical hum is prevalent in mains $\overline{\text{trans}}$ formers and can be amplified when bolting to your metal work. Therefore you may find a small rubber gasket or similar material is worth fitting to quieten this hum to its' minimum, but please ensure the frame is grounded to the supply safety earth.