
## **8398**

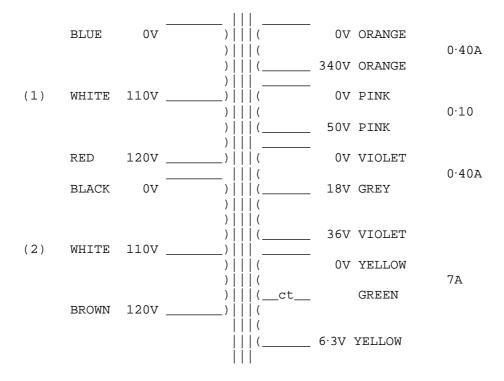

For 240V: Join RED & BLACK. Use BLUE & BROWN (Isolate both WHITES separately)

For 120V: Join BLUE & BLACK OV and join RED & BROWN 120V.

(Isolate both WHITES)

For 110V: Join BLUE & BLACK OV and join both WHITES 110V.

(Isolate RED & Isolate BROWN)

If the White leads are cut short please ensure the TWO wires are joined together in BOTH cases.

 $\underline{\text{Note:}}$  A certain amount of mechanical hum is prevalent in mains transformers and can be amplified when bolting to your metal work. Therefore you may find a small rubber gasket or similar material is worth fitting to quieten this hum to its' minimum.