


9294

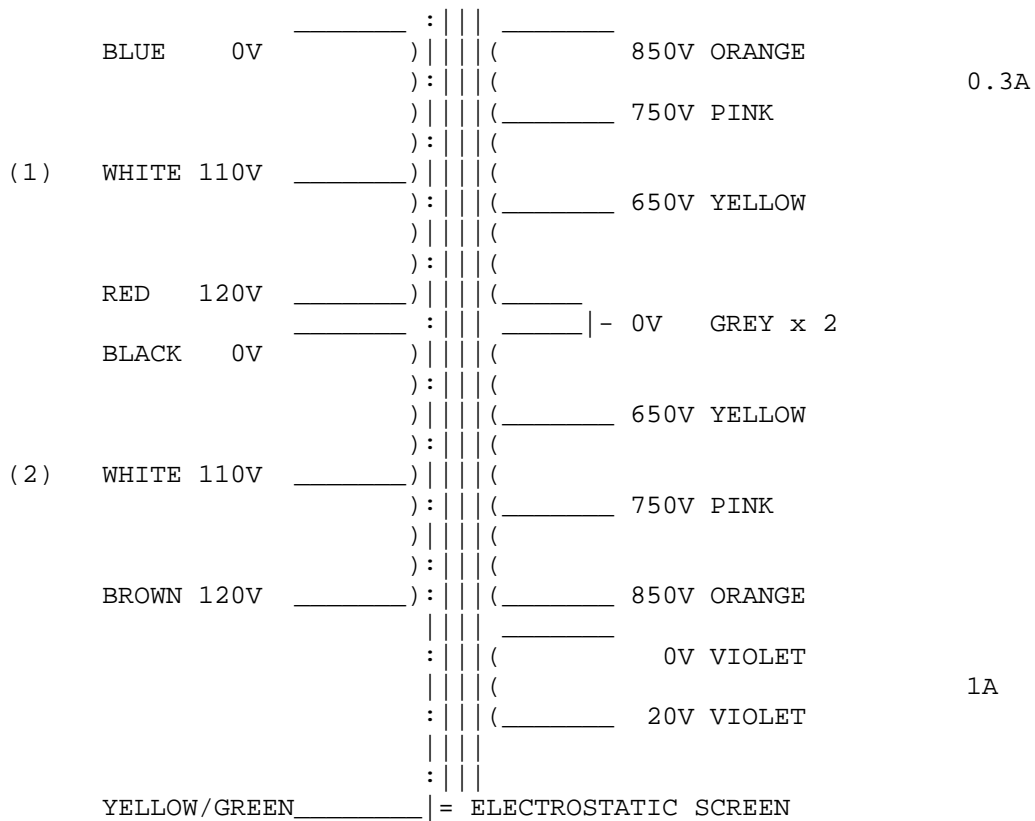

- For 240V: Join RED & BLACK. Use BLUE & BROWN (Isolate both WHITES separately)
- For 120V: Join BLUE & BLACK 0V and join RED & BROWN 120V. (Isolate both WHITES)
- For 110V: Join BLUE & BLACK 0V and join both WHITES 110V. (Isolate RED & Isolate BROWN)

If the White leads are cut short please ensure the TWO wires inside the sleeving are joined together in BOTH cases.

Note: A certain amount of mechanical hum is prevalent in mains transformers and can be amplified when bolting to your metal work. Therefore you may find a small rubber gasket or similar material is worth fitting to quieten this hum to its' minimum, but please ensure the frame is grounded to the supply safety earth.