


9317

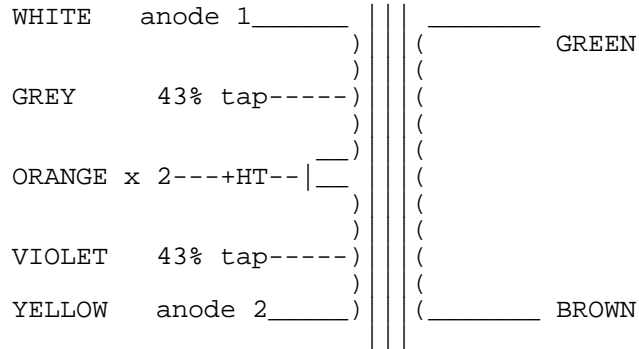

The transformer will need to be mounted at 90 degrees to the original to fit the space, and will need to be raised up to allow for the wires to fit onto the tag board in the same way as the old transformer